

Action Trailer Depot Inc.

We get you rolling!



Trailer Maintenance Tips

- 1) Have the wheel bearings and brake system serviced every 3000 miles or once a year.
- 2) Tighten all wheel lug nuts every 50 miles for the first 200 miles and once a year afterwards.
- 3) Check all tires before any trip for proper inflation, and don't forget the spare!
- 4) Lubricate the coupler, all door latches and grease all fittings annually.
- 5) Check break-away battery and switch operation annually.
- 6) Regularly check all exterior D.O.T. light functions, parking lights, turn signals and brake lights.
- 7) Annual safety inspection performed by a trailer professional.
- 8) Horse trailer floors should have mats removed and the floor washed every year.

If you have a living quarters trailer, perform these additional services:

- 1) Winterize the water system before freezing temperatures are expected.
- 2) Have the propane system checked every year for leaks by a certified LP technician.
- 3) Flush and sanitize the fresh water system before the camping season.
- 4) Inspect and seal any roof seal cracks or voids.
- 5) Clean the air conditioner air filter and inspect the condenser for debris.

Action Trailer Depot Inc.

www.actiontrailerdepot.com

9999 Central Ave. NE
Albuquerque, NM 87123

505-294-1654
800-700-4994
FAX 505-294-0329